


## Rectifier Bridge Diode Single 600V 22A 4-Pin(4+Tab) ISOPLUS I4-PAC Tube

<b>Manufacturer:</b>	<a href="#">IXYS Corporation</a>
<b>Package/Case:</b>	i4-PAK-5
<b>Product Type:</b>	Thyristors
<b>RoHS:</b>	RoHS Compliant/Lead free 
<b>Lifecycle:</b>	Active

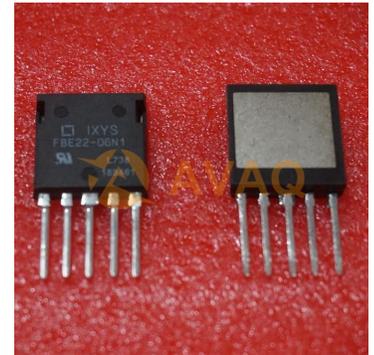


Images are for reference only

[Inquiry](#)

### General Description

The FB9L is a universal lamp alarm relay designed to sense the failure of flashing LED beacon lamps. It will monitor the operation of one to eight beacons connected to a single flasher and/or auxiliary modules and the operation of the flasher. The FB9L output relay energizes when one or more lamps fail. All monitored lamps must be the same wattage and voltage. The 0.5A solid-state output energizes when a flasher failure is sensed. Operation: When a LED beacon lamp fails, the FB9L senses a decrease in current flow. After a 10s lamp failure trip delay, the isolated SPDT (4-5-6) and non-isolated SPNO (3-1) relay contacts energize. These contacts are used to indicate a beacon failure has occurred. The "L" onboard LED indicator flashes green during the trip delay and glows red after the output relay energizes. Connected to a site monitoring system, it provides remote beacon monitoring required by FAA-AC No: 150/5345-43E. The FB9L also monitors the operation of the flasher. If the flasher remains in the ON or OFF condition for more than 6s the solid state output energizes and the "F" flasher failure, onboard LED glows red. This output is normally used to energize an external flasher bypass relay. The contacts of the bypass relay are used to route voltage around the failed flasher and to indicate an alarm condition. Note: In a single flasher, single beacon system, if the beacon lamp fails, zero current flow is detected. This will cause the flasher failure output to energize after 6s and then the beacon failure outputs after 10s. This is normal operation and can be expected anytime zero current is flowing through the monitored conductor.

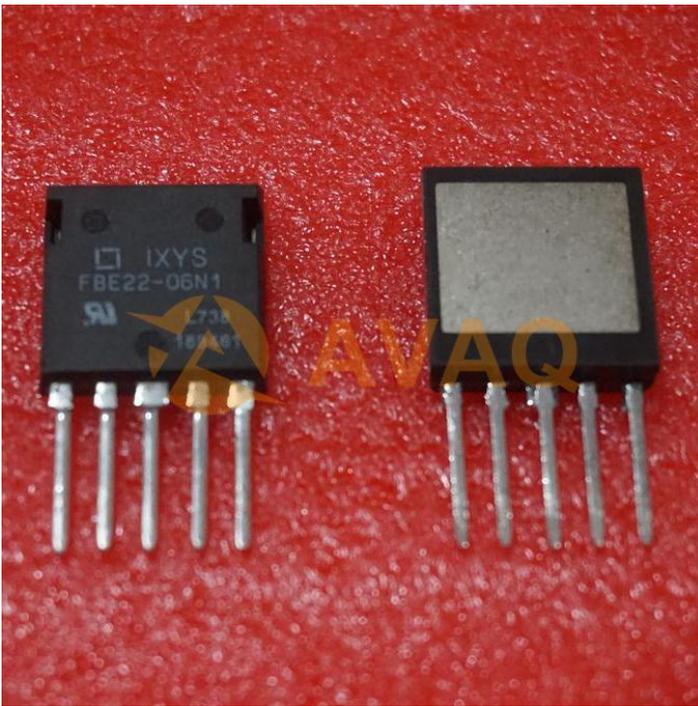

## Recommended For You

---

### VUO30-16NO3

IXYS Corporation

MODULE

### VUO52-16NO1

IXYS Corporation

MODULE

### VUI72-16NOXT

IXYS Corporation

MODULE

### VUO25-16NO8

IXYS Corporation

MODULE

### VVZB135-16NO1

IXYS Corporation

MODULE

### GUO40-12NO1

IXYS Corporation

MODULE

### VUO36-12NO8

IXYS Corporation

MODULE

### VBO40-12NO6

IXYS Corporation

MODULE

### VUB116-16NOXT

IXYS Corporation

MODULE

### VUB72-16NOXT

IXYS Corporation

MODULE

### VUB160-16NOXT

IXYS Corporation

MODULE

### VVZB170-16IOXT

IXYS Corporation

MODULE

### VVZB120-12io2

IXYS Corporation

MODULE

### VVZB135-16IOXT

IXYS Corporation

MODULE

### MCNA120UI2200TED

IXYS Corporation

MODULE